

 
80mm

80mm

80mm


1. Product Appearance

11.03.03.SMS-XE401-XE404-8858

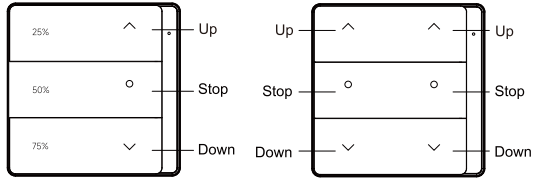

WSXE401

 WSXE402

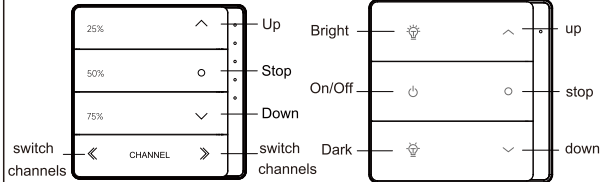

WSXE403

WSXE402-LED

WERT WSXE401-403 instruction

 
 
2. Technical Parameters

Power supply: 3V
 Operating Temperature: -20°C to +60°C
 Operating current: ≤16mA
 Coding mode: rolling code
 Transmission frequency: 433.92MHz

3. Code Learning

1. WSXE401

Method #1: Shortly press the learning button once.
Method #2: Synchronously press the up & down button once, and press the stop button once then.
Notice: the percentage control could only be used once up and down limits set.

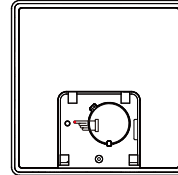
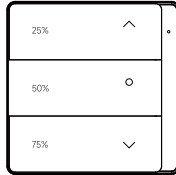


2. WSXE402

Method #1: Press Stop button of the channel you want to learn. Power on the motor, then shortly press the learning button once.
Method #2: Press Stop button of the channel you want to learn. Power on the motor, then synchronously press the up & down button once, and press the stop button once then.

4. WSXE402-LED

  Method #1: Shortly press the learning button once.
Method #2: Synchronously press the up & down button once, and press the stop button once then.

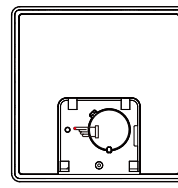
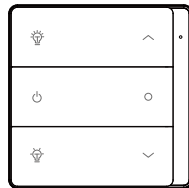


Notice

- Do not hold any buttons down during setup process unless specifically told to do so. A half second press should be plenty and allow 1 second between presses.
- If you notice that the indicator light has weakened, please replace the battery.

3. WSXE403

  Method #1: Press left or right button to choose the channel you want to learn. Power on the motor, then shortly press the learning button once.
Method #2: Press left or right button to choose the channel you want to learn. Power on the motor, then synchronously press the up & down button once, and press the stop button once then.
Notice: the percentage control could only be used once up and down limits set.

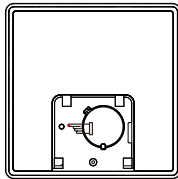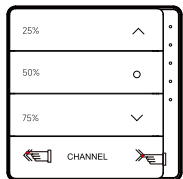

WSXE401-403系列说明书70g双胶纸

黑白印刷

尺寸80-80mm 二折页